

# Spoiler templates for 2000-2001 Revell-Monogram NASCAR Monte Carlo kits

Use these patterns to make replacement rear spoilers for the 2000-2001 Revell-Monogram Monte Carlo kits. It adds length and height to the spoiler for a better-looking model.


## INSTRUCTIONS

Cut projecting portion of spoiler off kit body and sand spoiler area of rear deck lid flush. From the inside of the body, scribe a slot for the new spoiler using the back of a hobby knife blade; the slot should be cut at about a 45-degree angle, and should be cut so that it will emerge where the old spoiler had been. Clean up the slot and insert the new spoiler; make adjustments as necessary, then secure in place with your favorite hobby adhesive. Use photos to help you adjust the spoiler and trim it out as desired.

For best results, cut new spoiler from .020" styrene stock.

The following diagram is for illustration only and is NOT TO SCALE:

Add a small lip to the top edge of the spoiler if building a car with the Daytona/Talladega aero package.

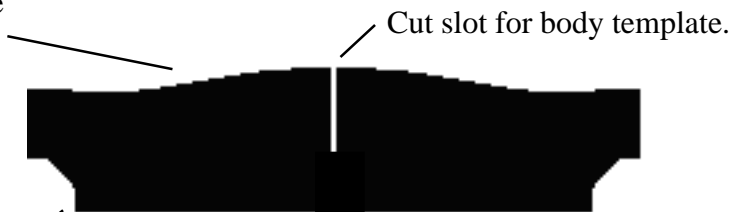

Cut slot for body template.

Insert this tab into the slot cut for the new spoiler.

Use these patterns to cut new spoilers. For best results, glue the patterns to an index card before cutting them out. (Several extras are provided for multiple models, or in case you goof one up.)

Above all, HAVE FUN!

